## 997 CARRERA 3.8L INSTALLATION MANUAL

### $\neg$ $\cdot$ REMOTE CONTROL SYSTEM FOR YOUR REFERENCE


- 1. Yellow: TPS voltage signal 0-5v
- 2. Red: key on switch
- 3. Brown: GND
- 4. One-way valve
- 5. Vacuum Electric valve
- 6. Vacuum Canister







### $\Box$ > SEARCH KEY OIV POWER⊕ > GNDΘ AND TPS VOLTAGE SIGNAL 0~5V ∘


# 1 • OPEN KEY OIV POWER(YOU CAN FIND IT AT COCKPIT) AND PUT RED CABLE INTO POSITION AS PHOTO SHOW.

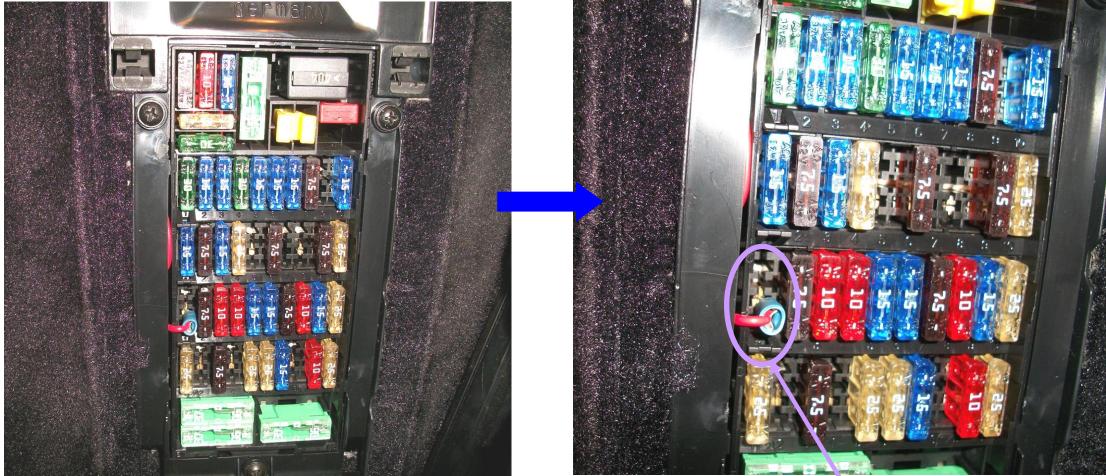


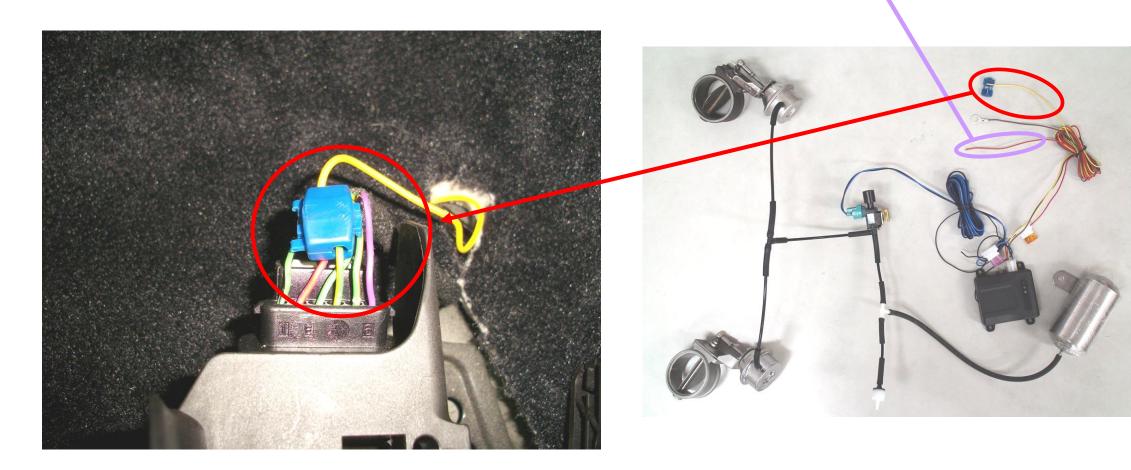


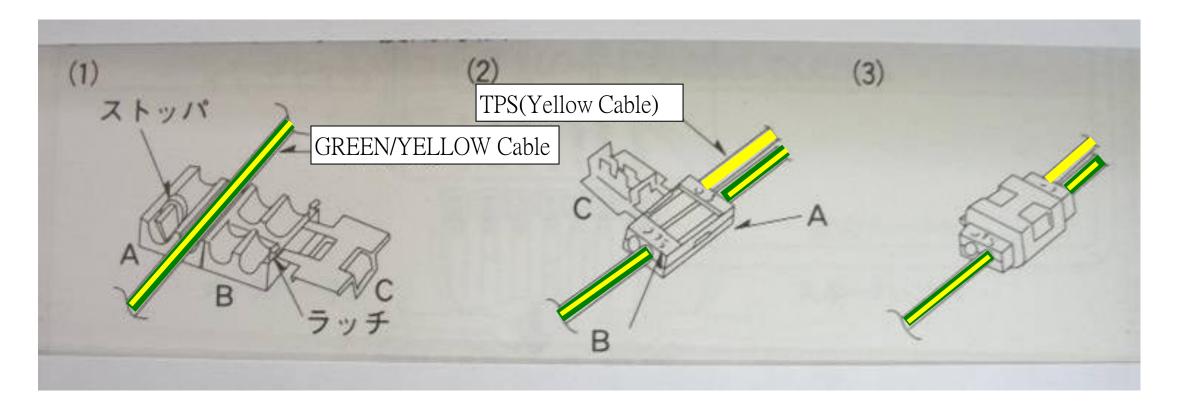



### $2 \cdot \text{GND}\Theta$ : HANG ON GND

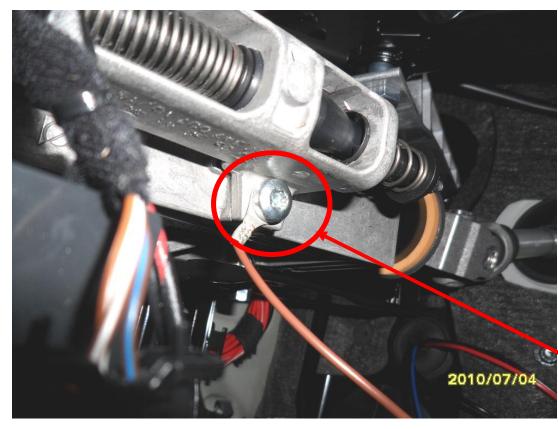

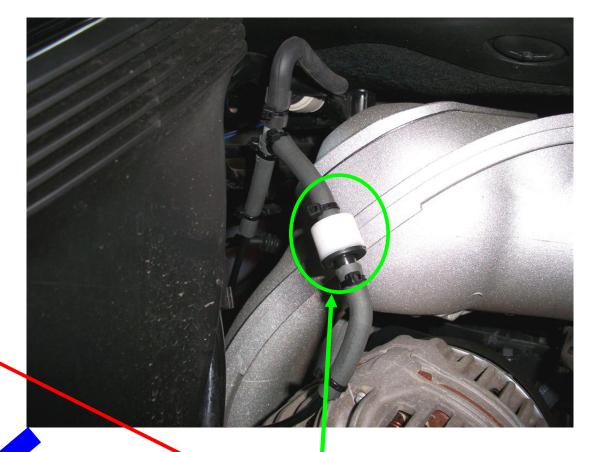

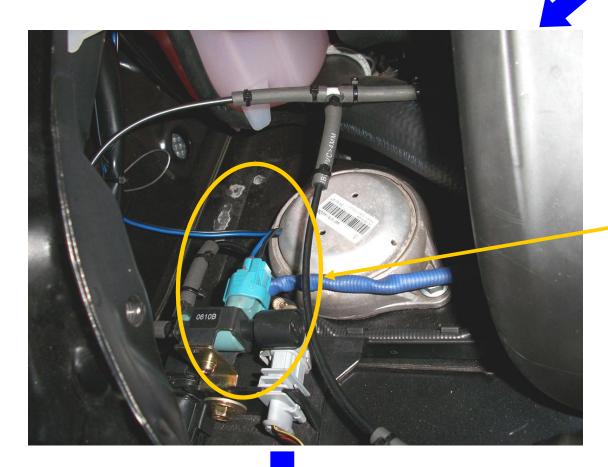

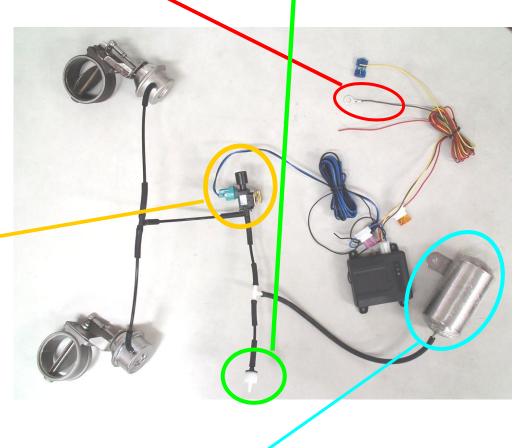

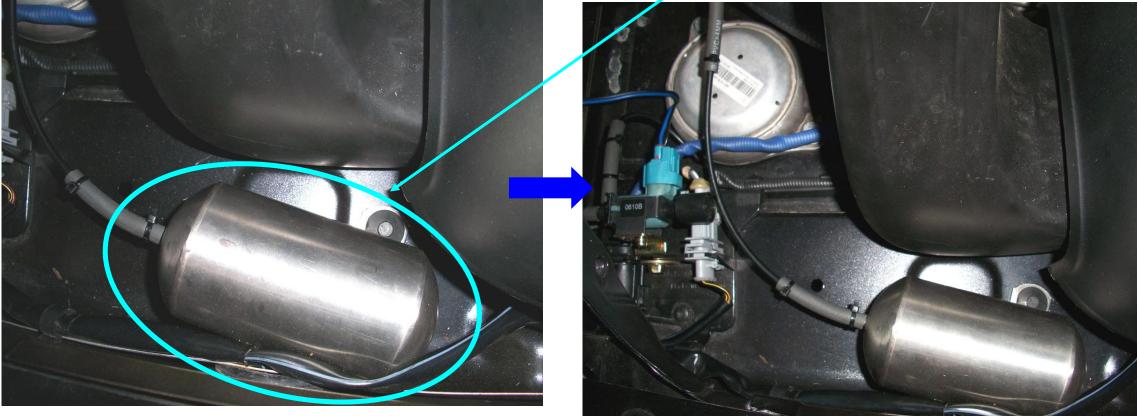



#### COMPLETED INSTALLATION

 $\Xi$   $\cdot$  IF YOU WANT TO TUNE YOUR MID PIPE PLEASE PAY ATTENTION TO THIS YOU HAVE TO TAKE OFF PART AS BELOW PHOTO SHOW

