


# ipe INNOTECH PERFORMANCE EXHAUST .P670-4 Installation Manual

## [Remote Controller System]



1. Red Cable : Key on Switch
2. Brown Cable : GND
3. Yello Cable : TPS Voltage Signal 0~5V
4. Electronic Valve

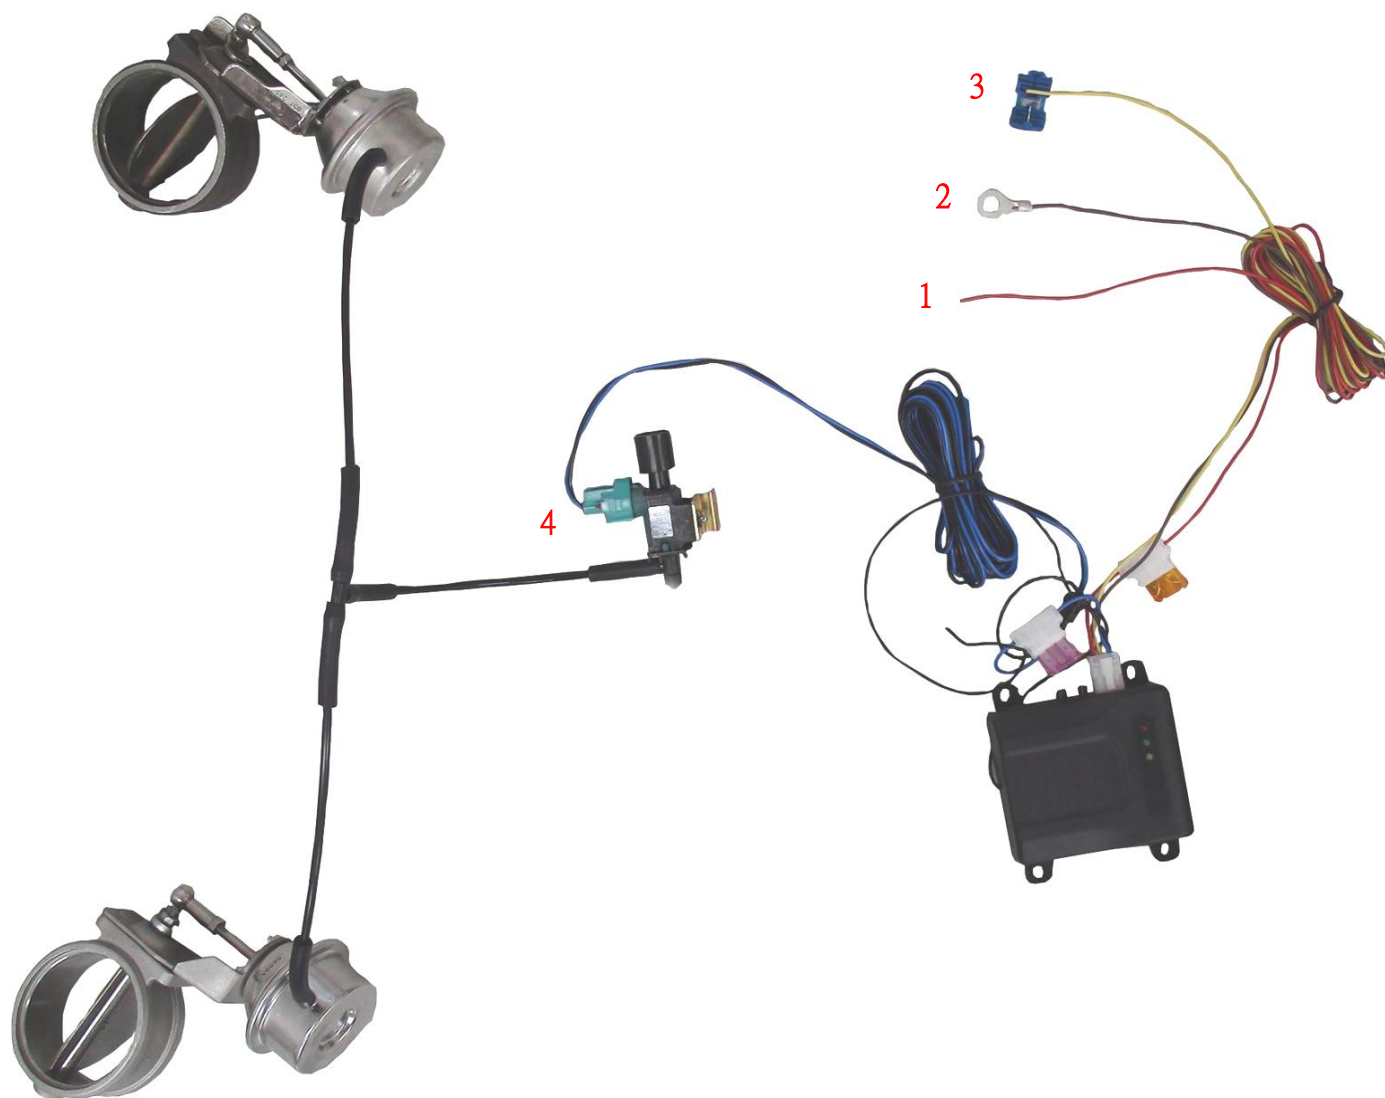

**Step1. FIND FUSE BOX, CONNECT WITH RED POWER CORD IN ORDER, HANG THE GND AND THROTTLE VALVE SIGNAL 0-5V**


**1、FIND FUSE BOX UNDER THE GLOVE COMPARTMENT AT PASSENGER'S SEAT AND CONNECT RED POWER CORD ON THE NUBER "10" (THE SECOND-LAST)**

↓ SEE THE IMAGE BELOW


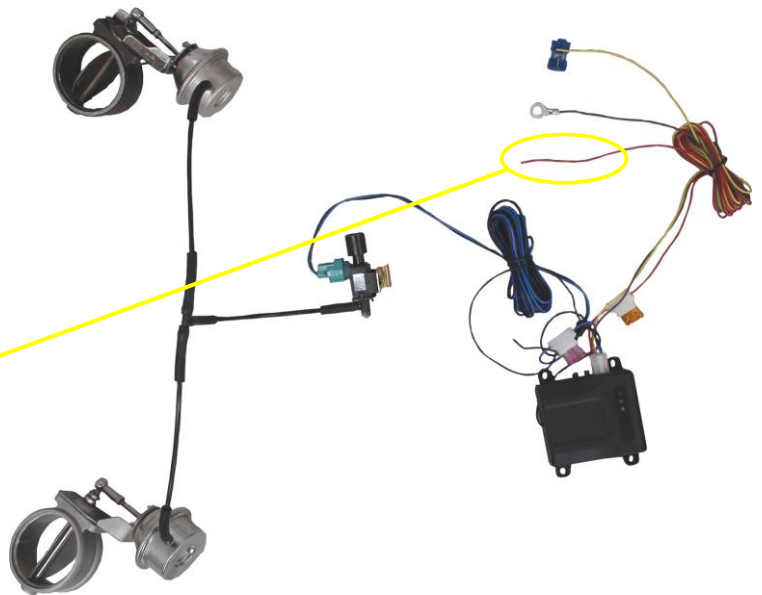
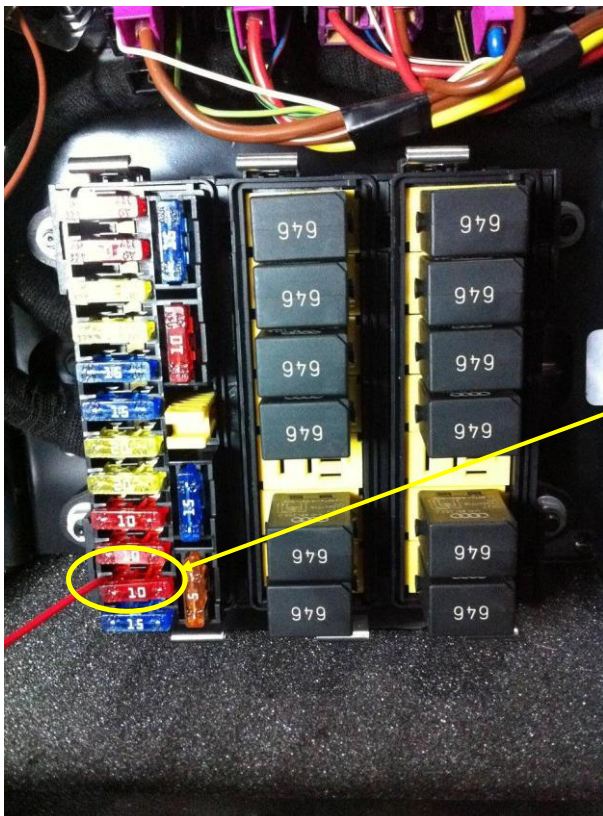




## 2、HANG GND ABOVE THE FUSE BOX

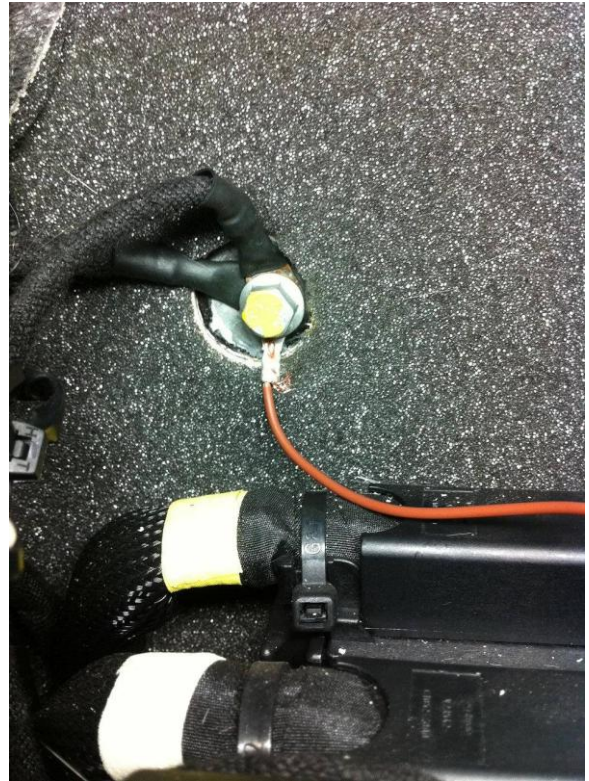


## 3、FIND YELLOW/BLACK CABLE LINES FROM ELECTRONIC POWER CONTROL ON THE RIGHT HAND SIDE OF ACCELERATOR PEDAL, THEN CONNECT YELLOW/BLACK CABLES

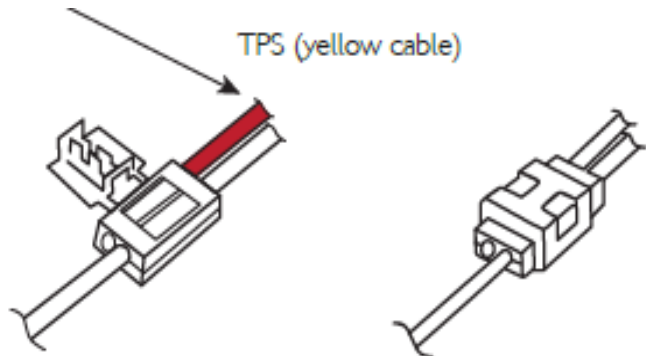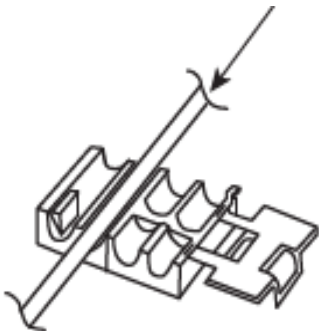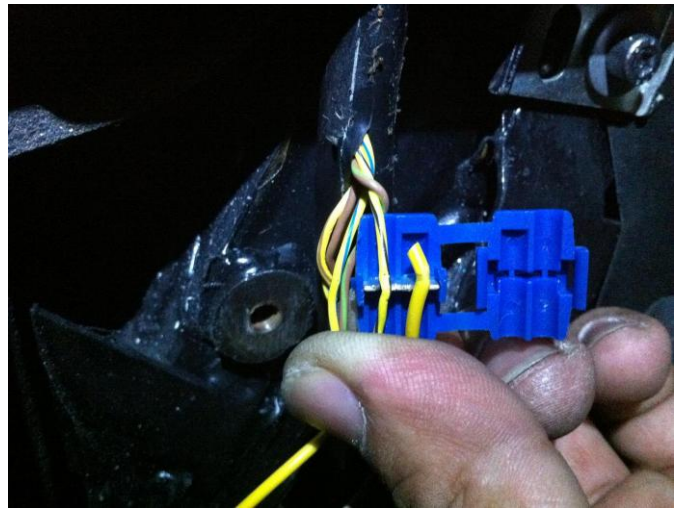




**Step2. OPEN THE ENGINE BAY YOU WILL FIND THE SOLENOID VALVE ON YOUR RIGHT HAND SIDE, PULL OUT THE "IN" AND "OUT " CABLE LINE**

**Before**

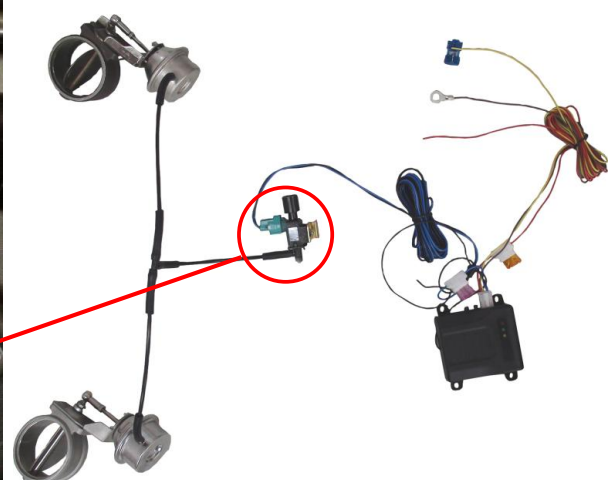



## After Installation

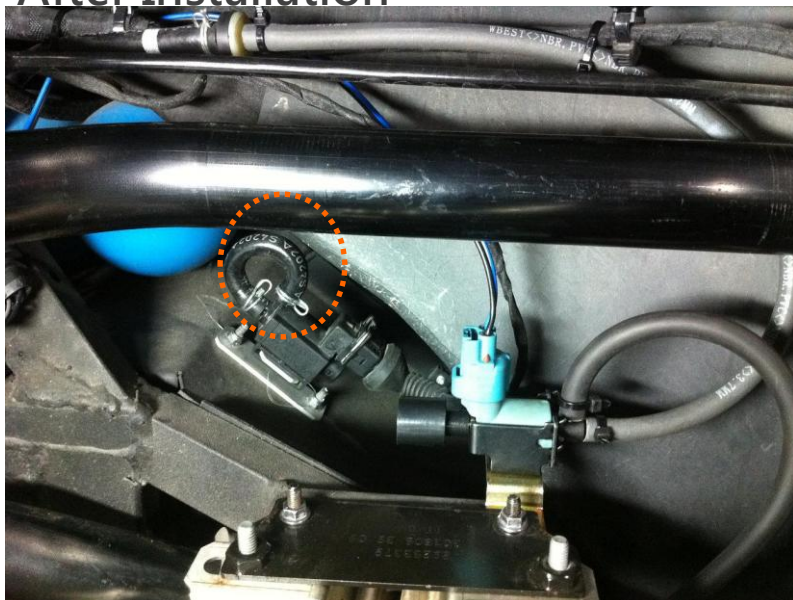

CONNECT THE STOCK "IN" AND "OUT"  
SOLENOID VALVE TOGETHER WITH  
CALBE LINES. SEE THE IMAGE ON YOUR  
LEFT HAND SIDE.

