


LP560-4 INSTALLATION MANUAL


一、REMOTE CONTROLLER SYSTEM FOR YOUR REFERENCE.

1. RED CABLE: KEY ON SWITCH
2. YELLOW CABLE: TPS VOLTAGE SIGNAL 0-5v
3. BROWN CABLE: GND
4. ELECTRONIC VALVE

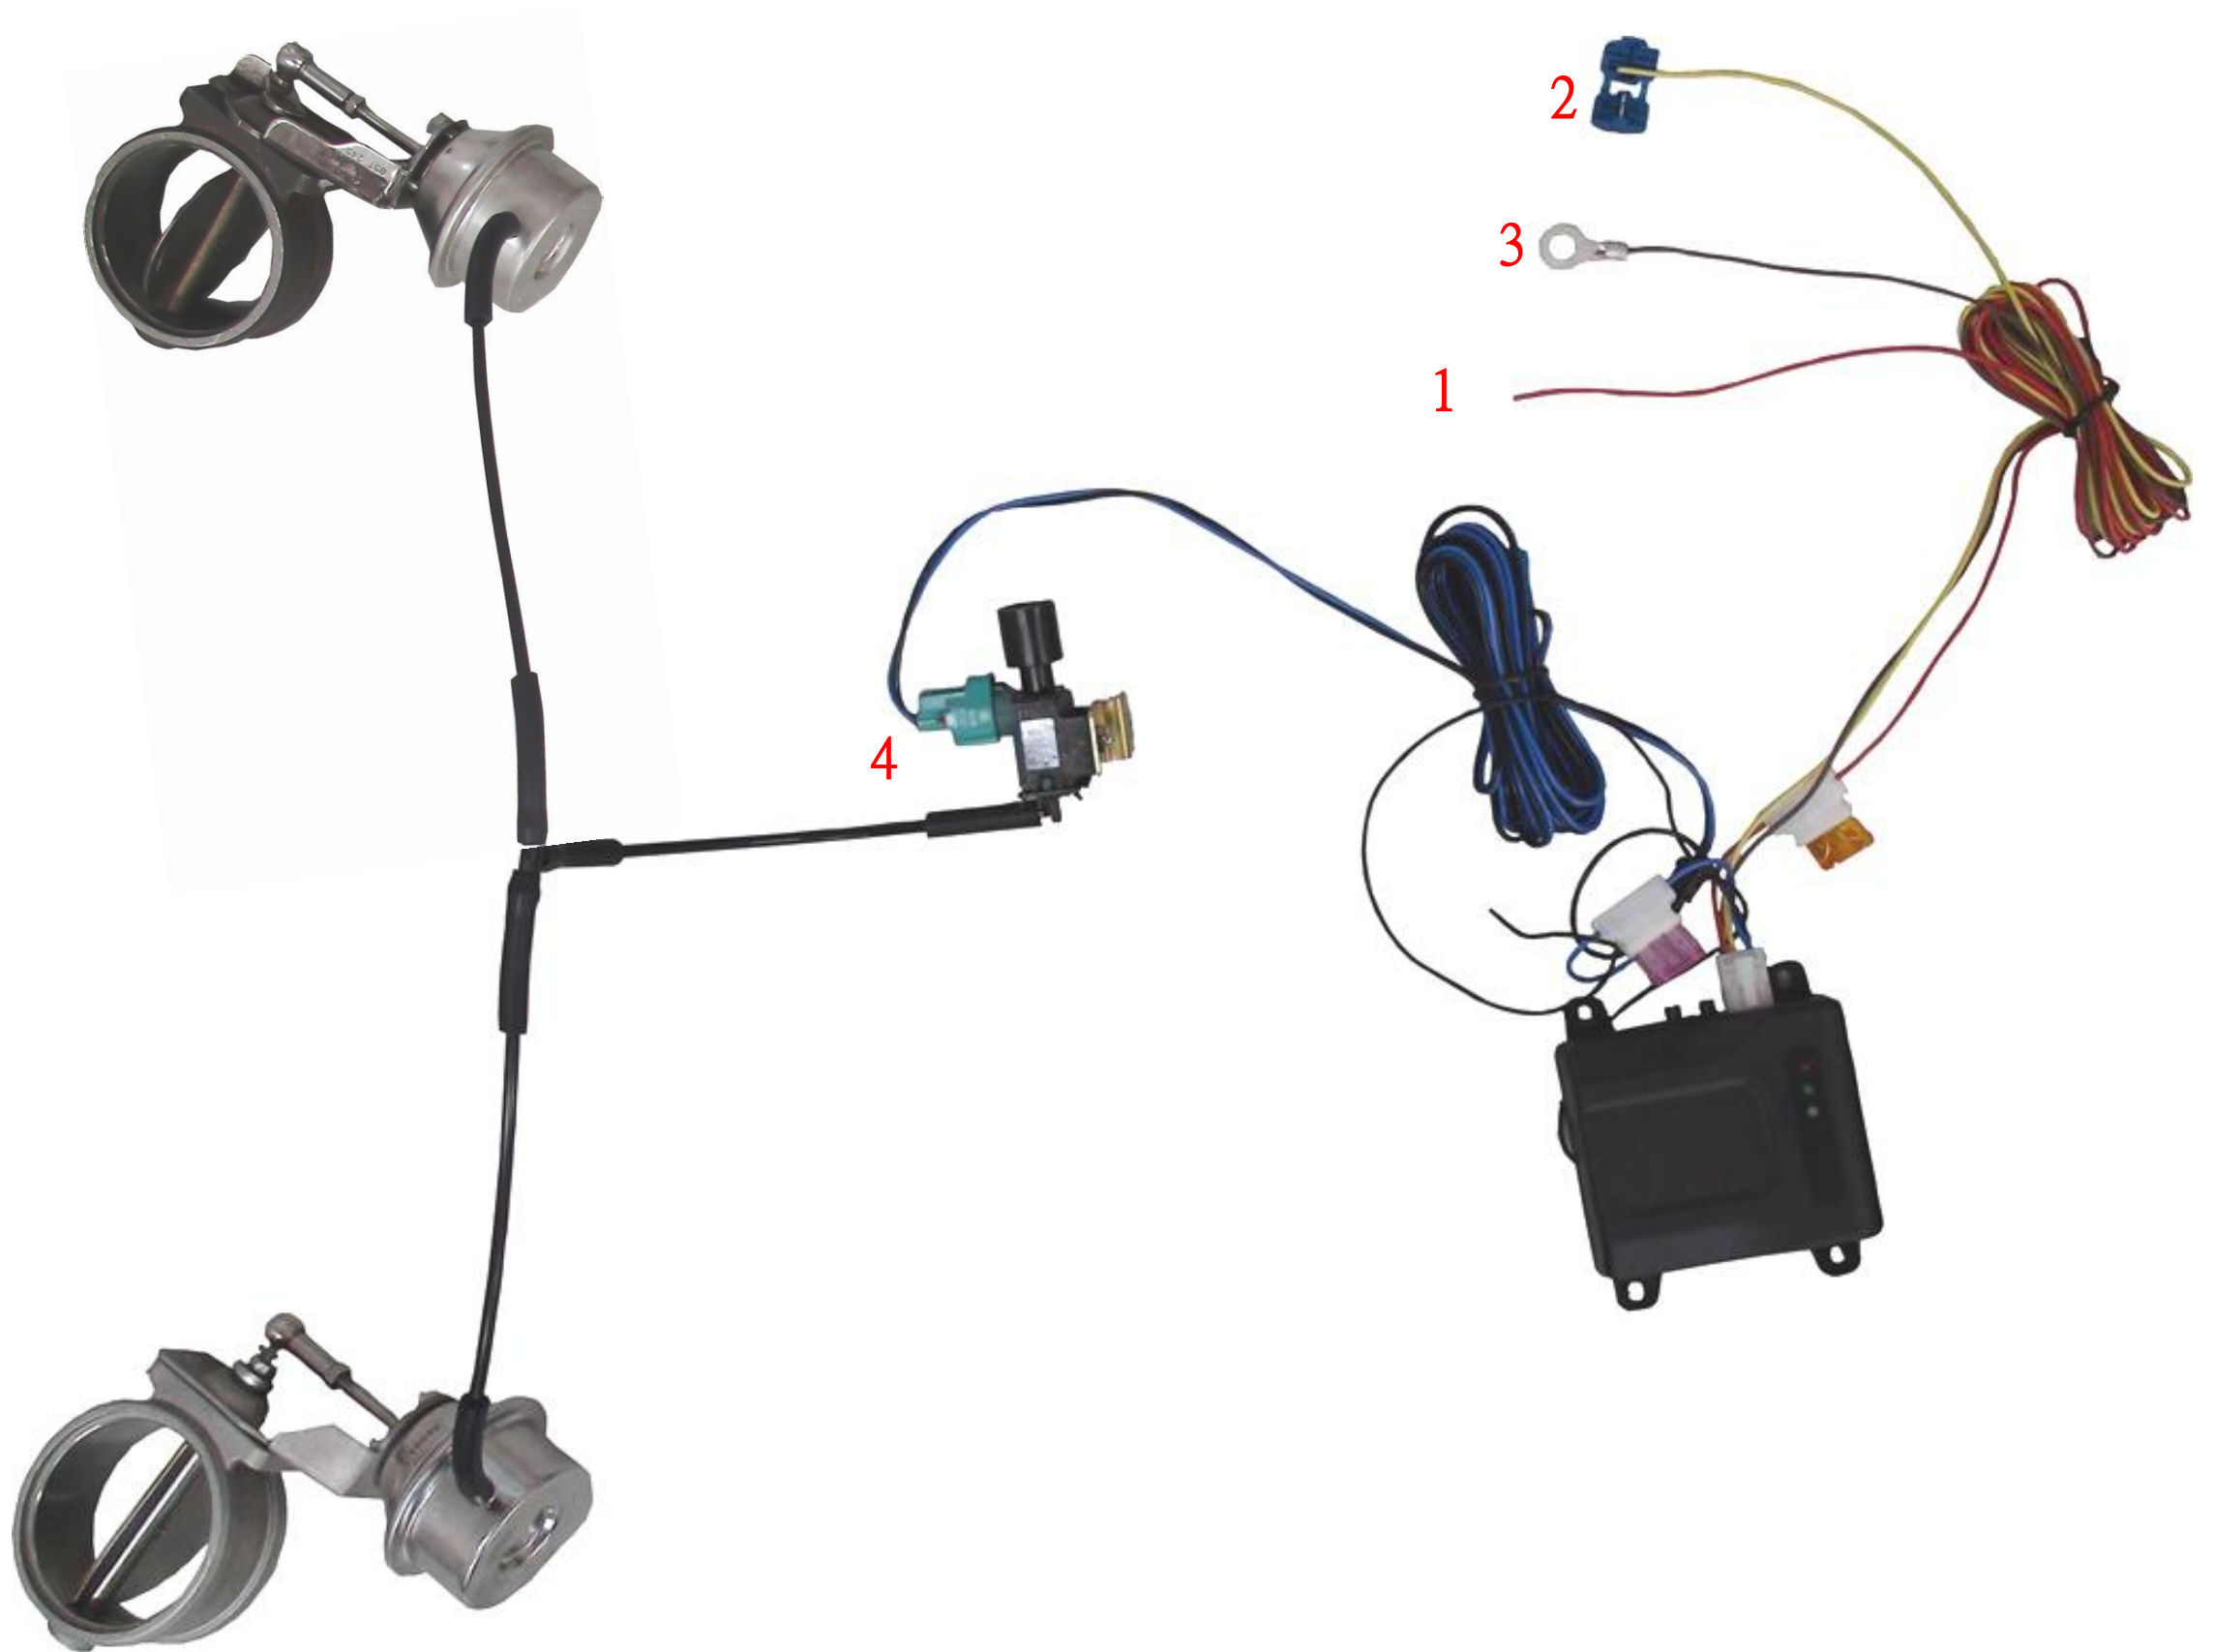


二、 CONNECT TPS VOLTAGE SIGNAL 0~5V 、 KEY ON SWITCH
AND HANG ON GND.



1、 YOU CAN FIND FUSE BOX UNDER GLOVE COMPARTMENT AT PASSENGER'S SEAT
AND INSERT RED CABLE IN NO.24 OF FUSE BOX.

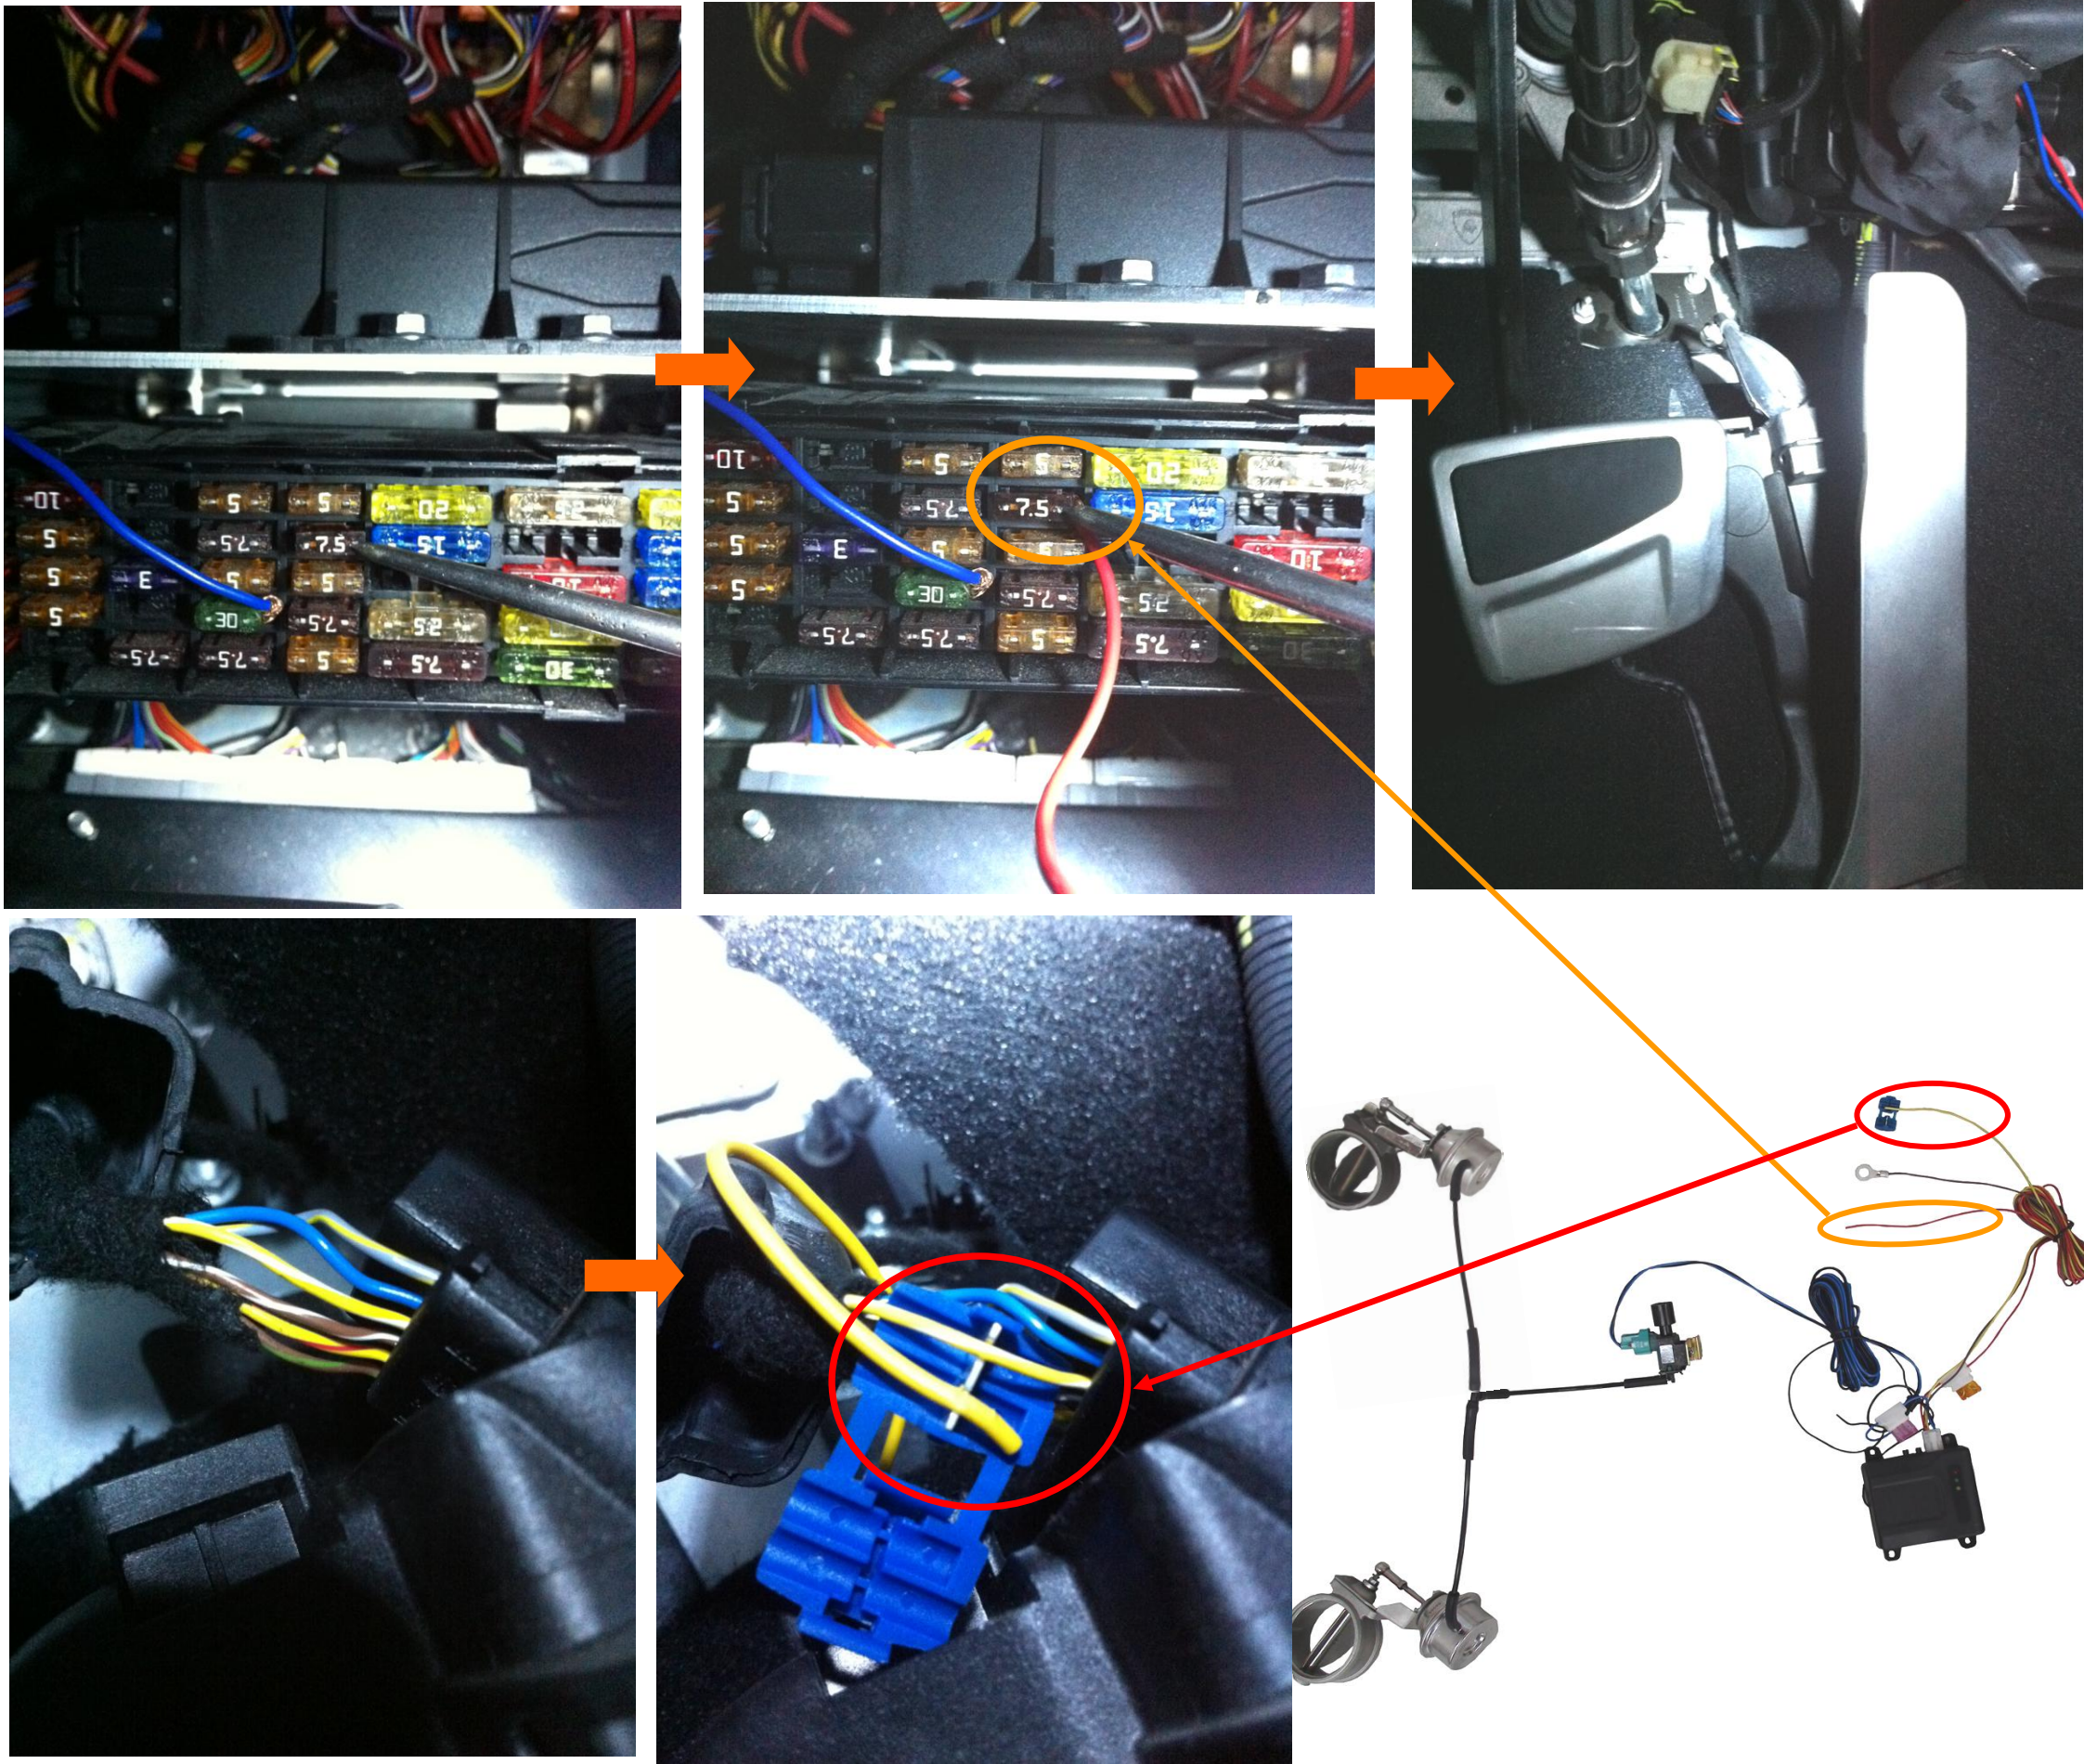

YOU CAN FIND YELLOW/WHITE CABLE OF
ELECTRONIC ACCELERATOR BEHIND GAS PEDAL.

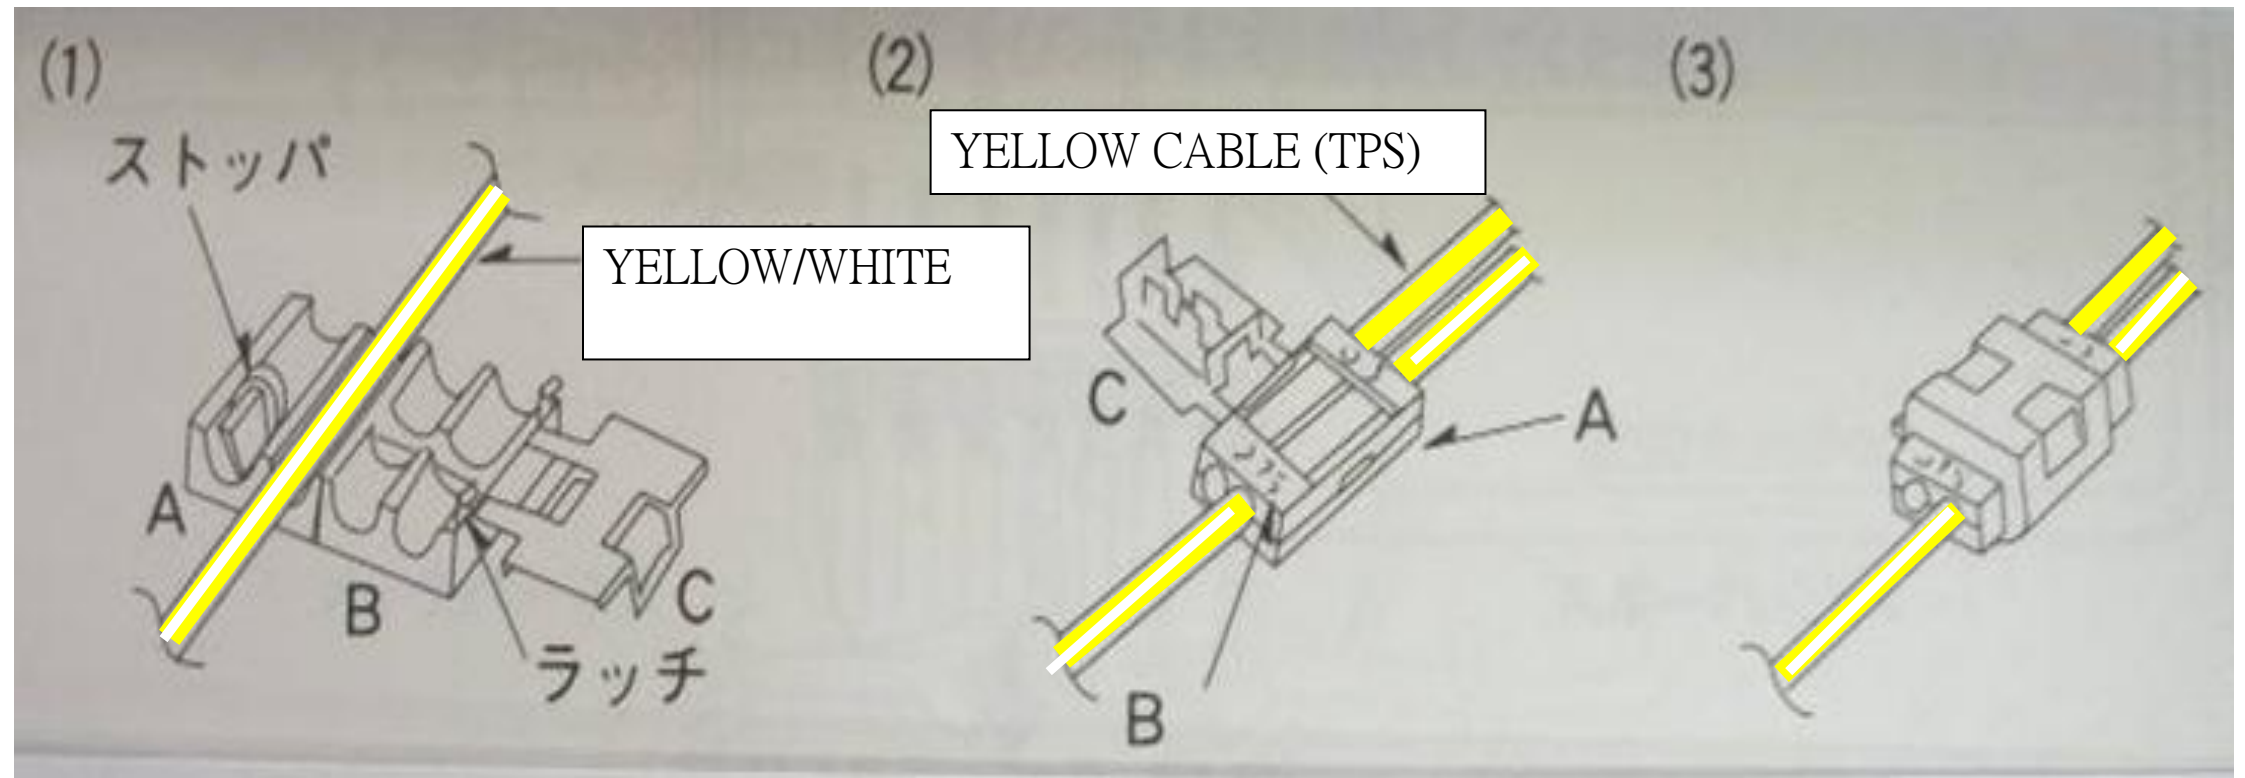


2、HANG ON GND AND CONNECT WITH ELECTROIC VALVE.

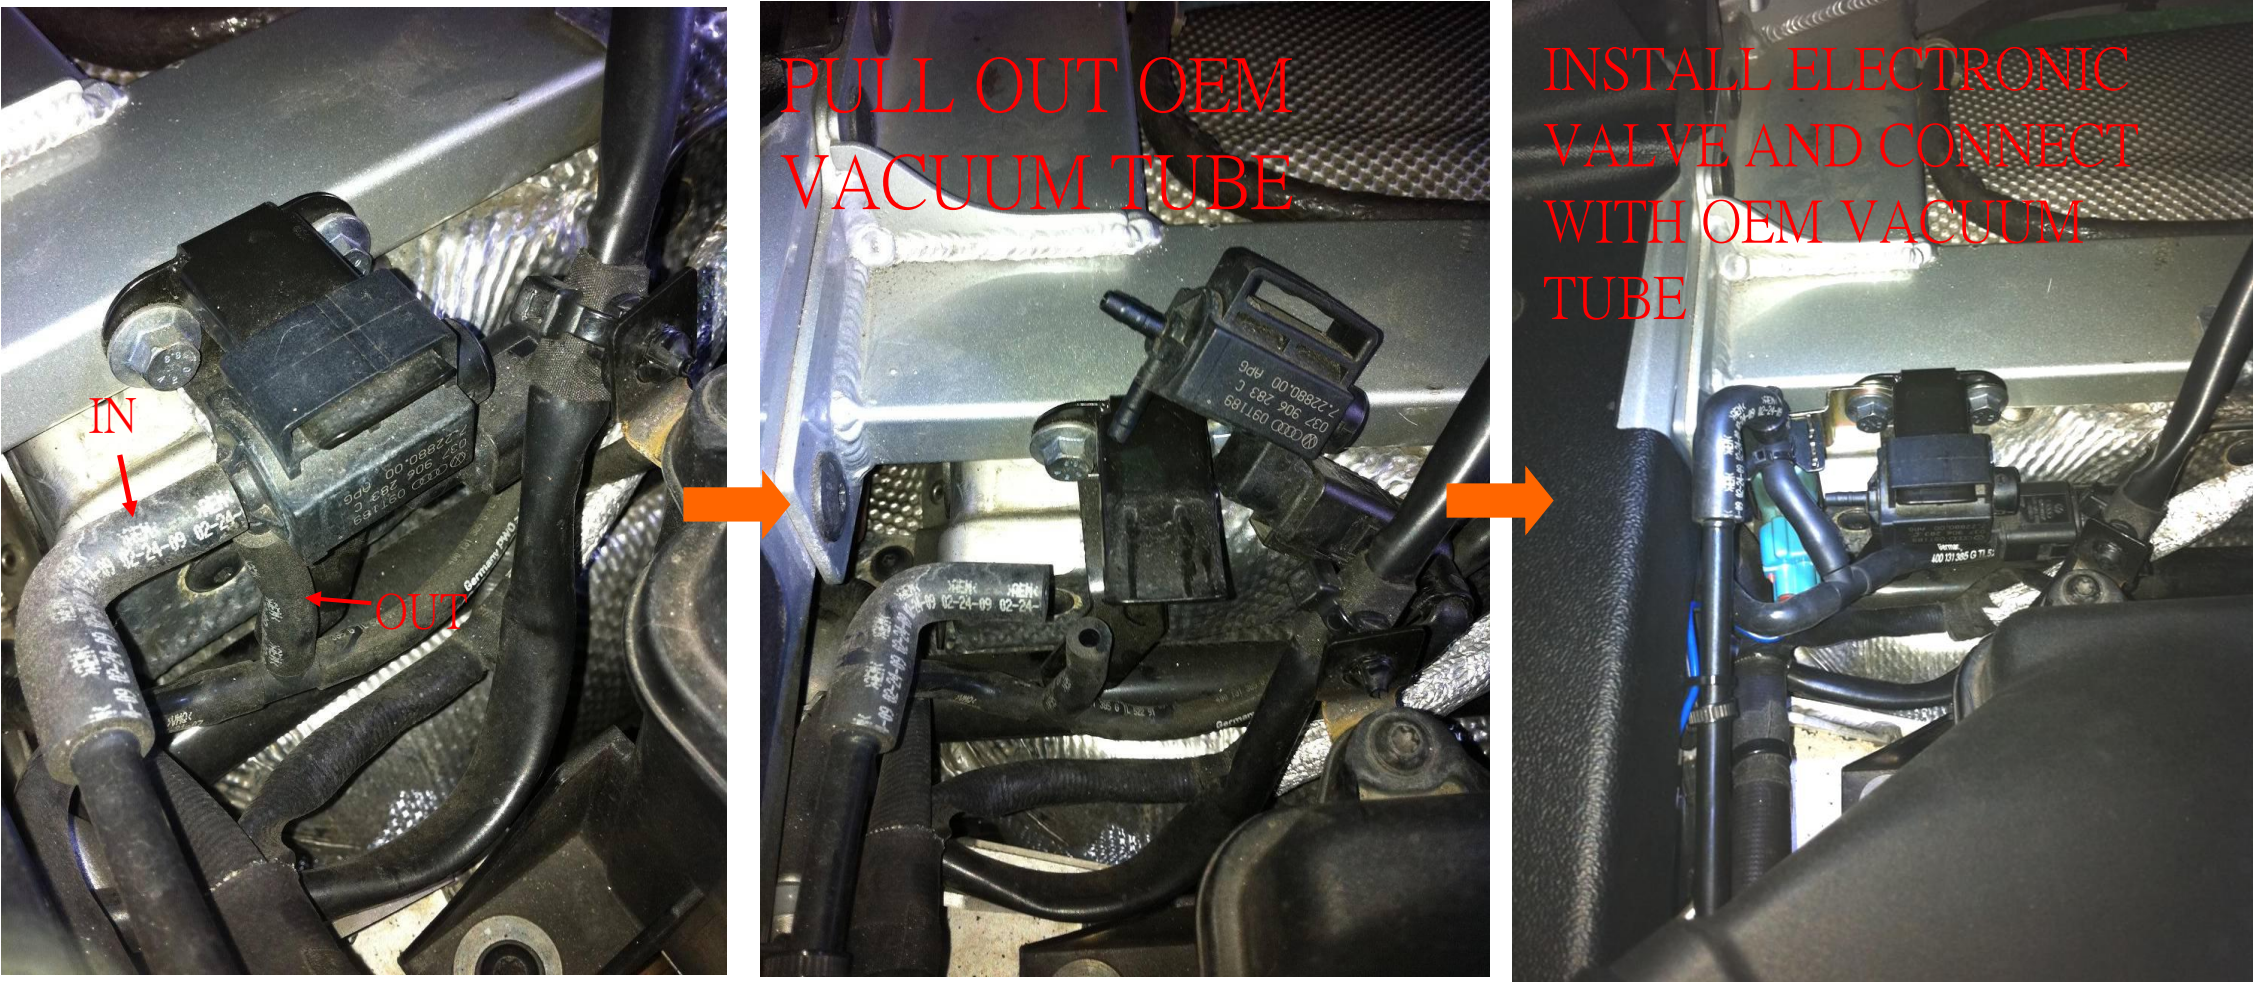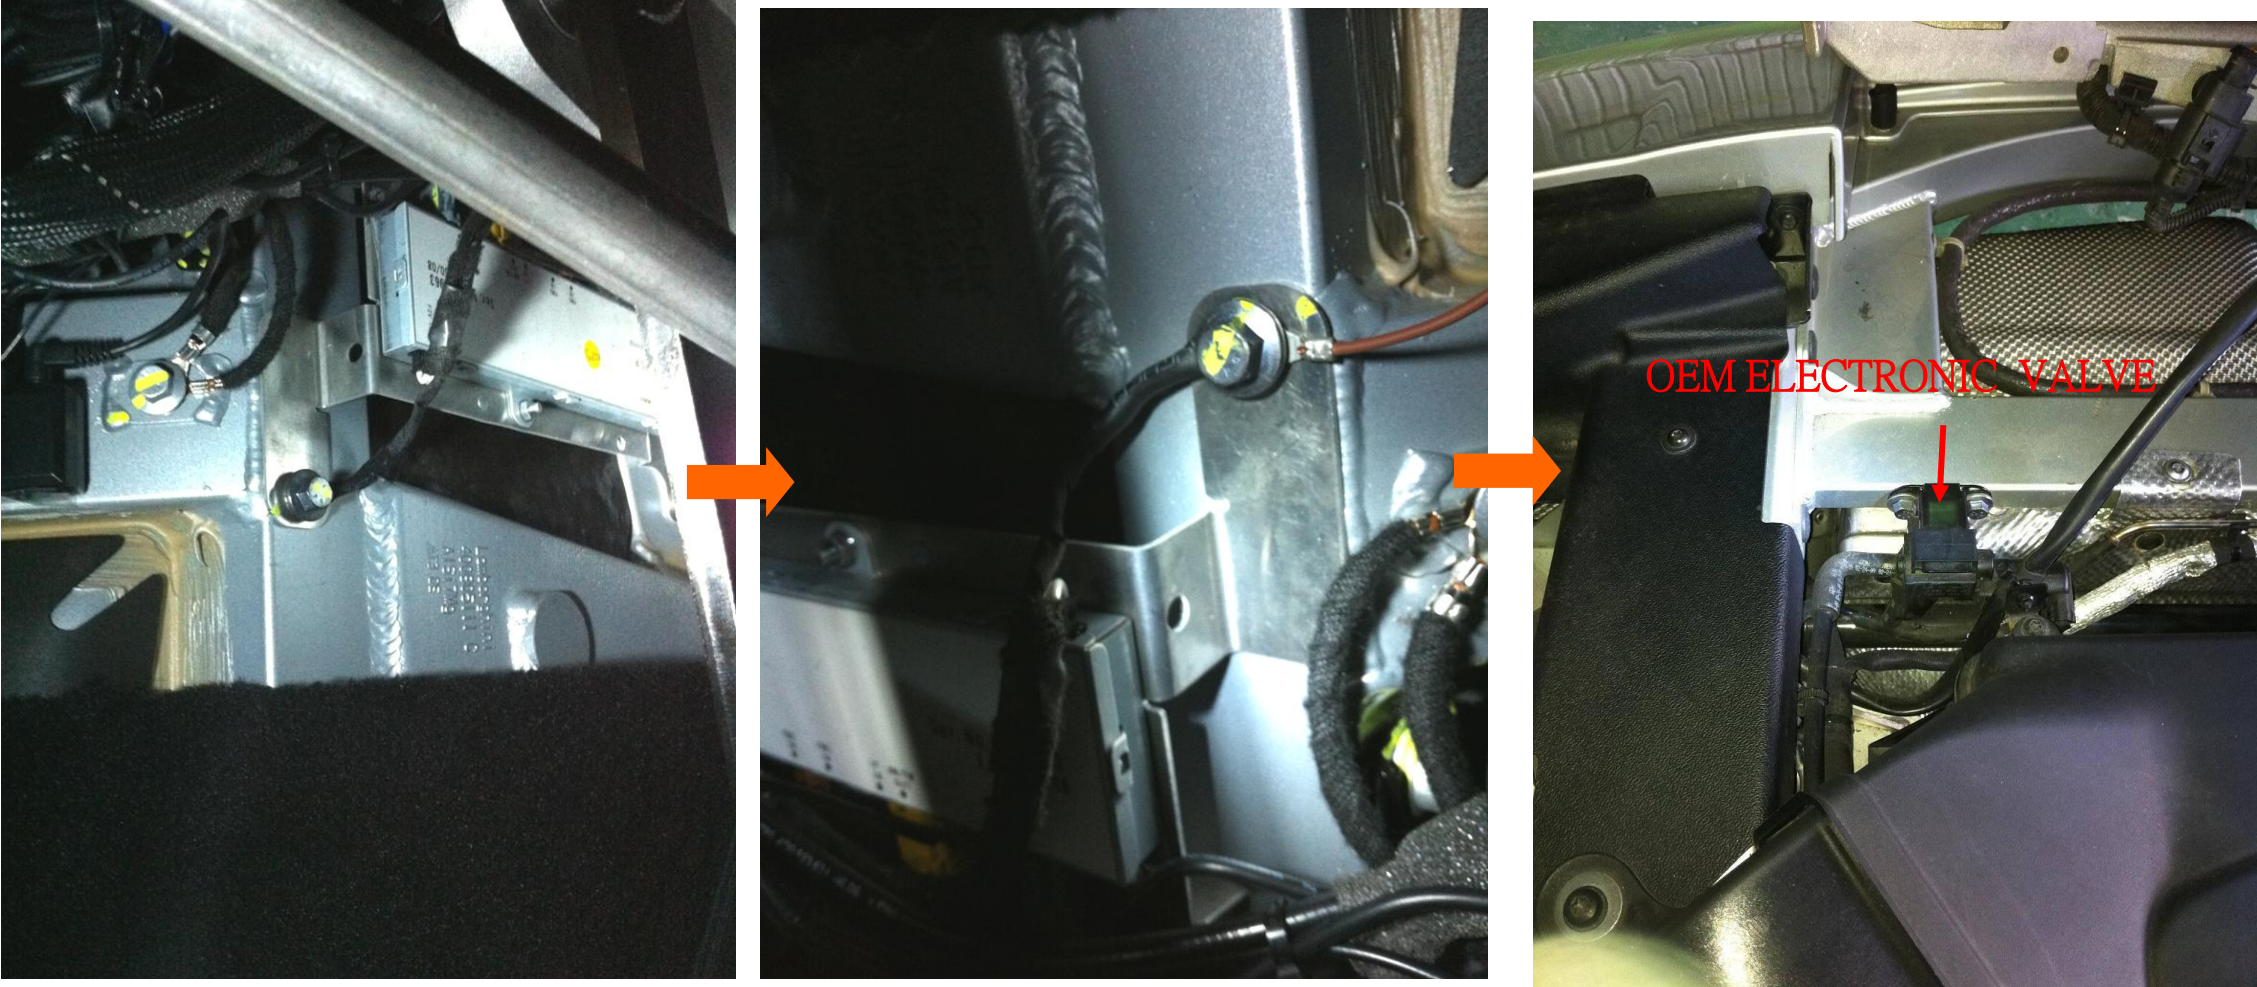

ATTENTION:WHETHER
VACUUM TUBE BE SUPPRESS
WHEN ENGINE BAY CLOSE.

註:

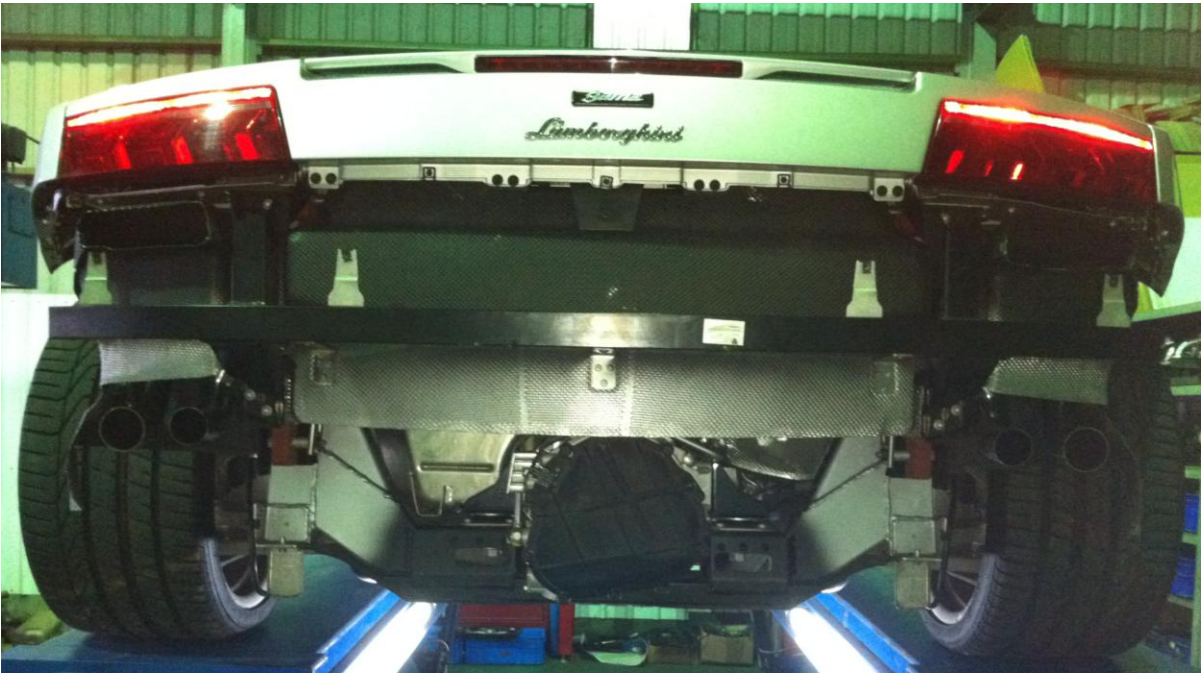

OEM HEAT SHIELD NEED INSTALLATION
BACK.