




# Porsche 981 Installation Instructions

First. The valve line diagram (for reference)

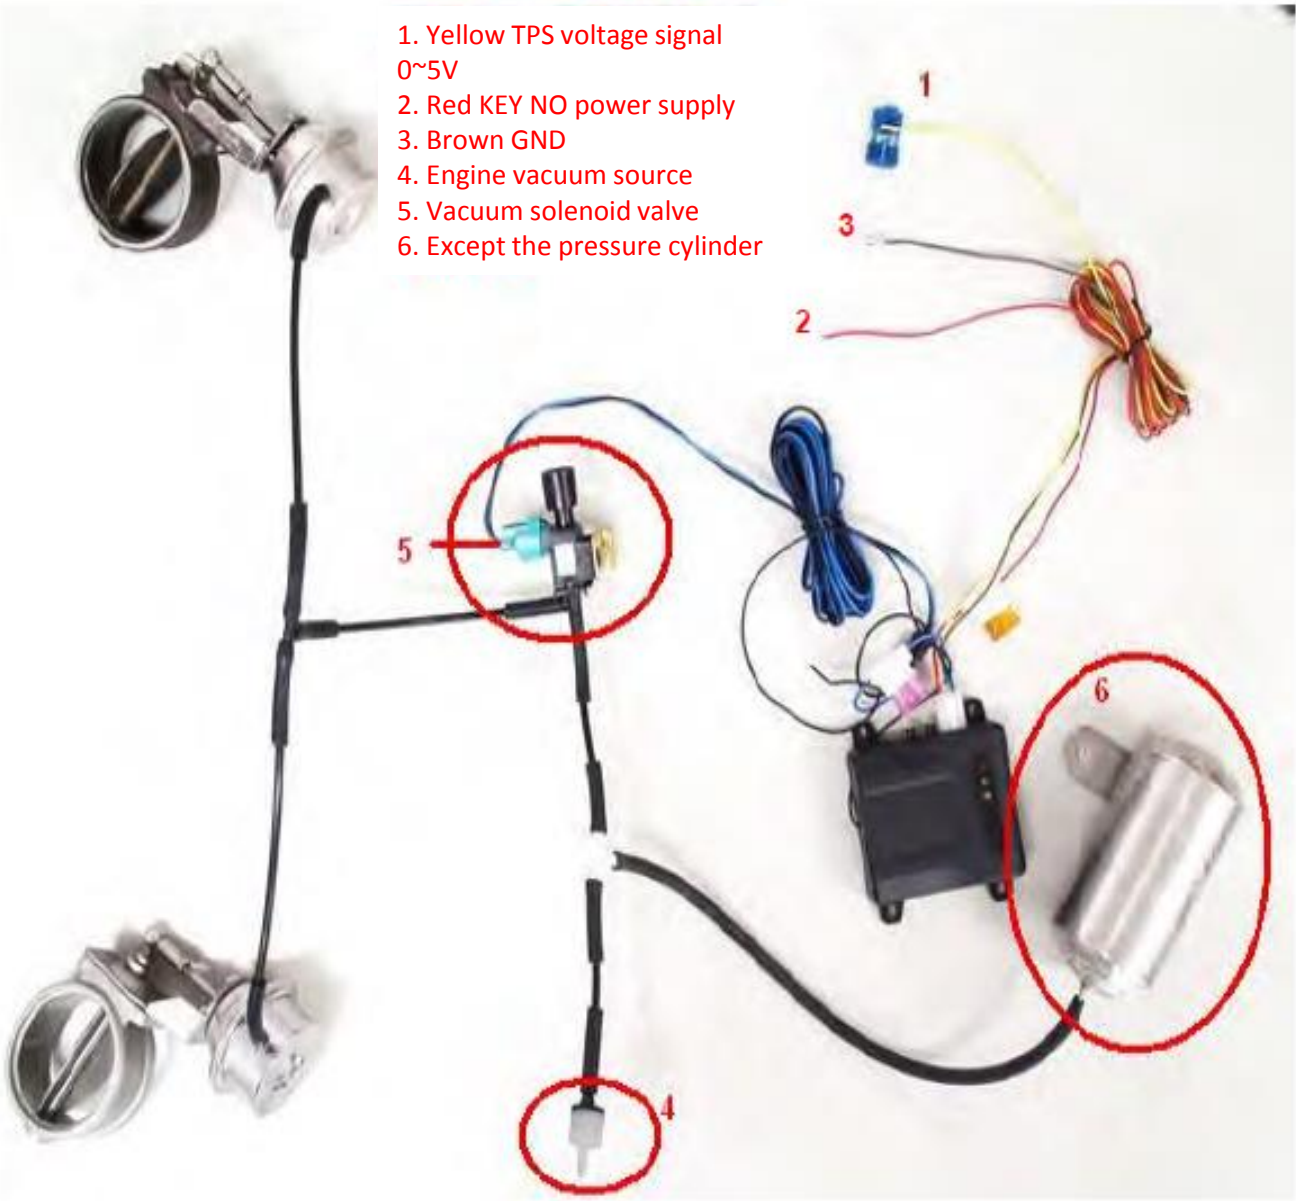


Second. Look for the power control box (KEY OIV POWER⊕), body grounding (GND⊖) and throttle valve (TPS 0~5V signal).




1. After finding the power control box ( KEY POWER⊕), connect the red power cord.

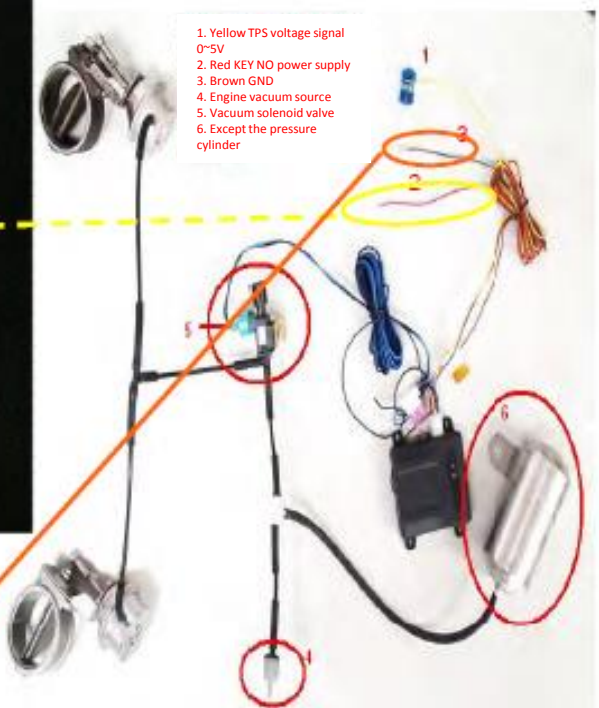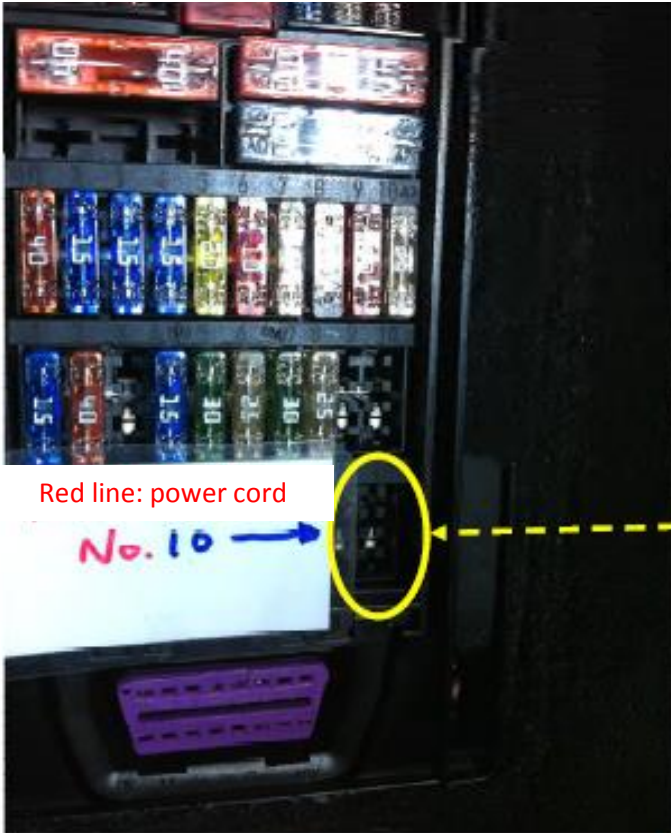

2. Hang the body ground (GND)

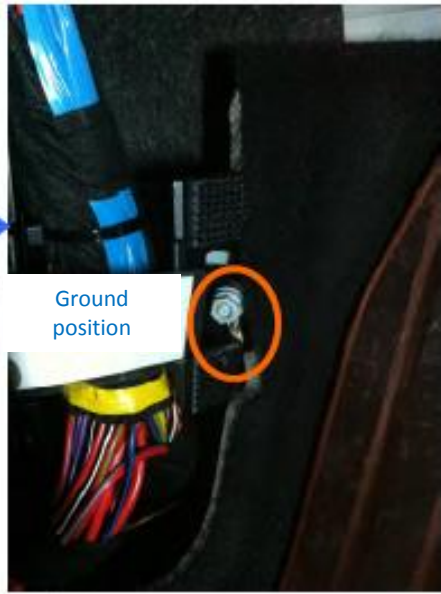

Third. Connect the yellow black wire and the throttle valve (TPS, yellow wire) with the intermediate terminal, as shown in the figure below.

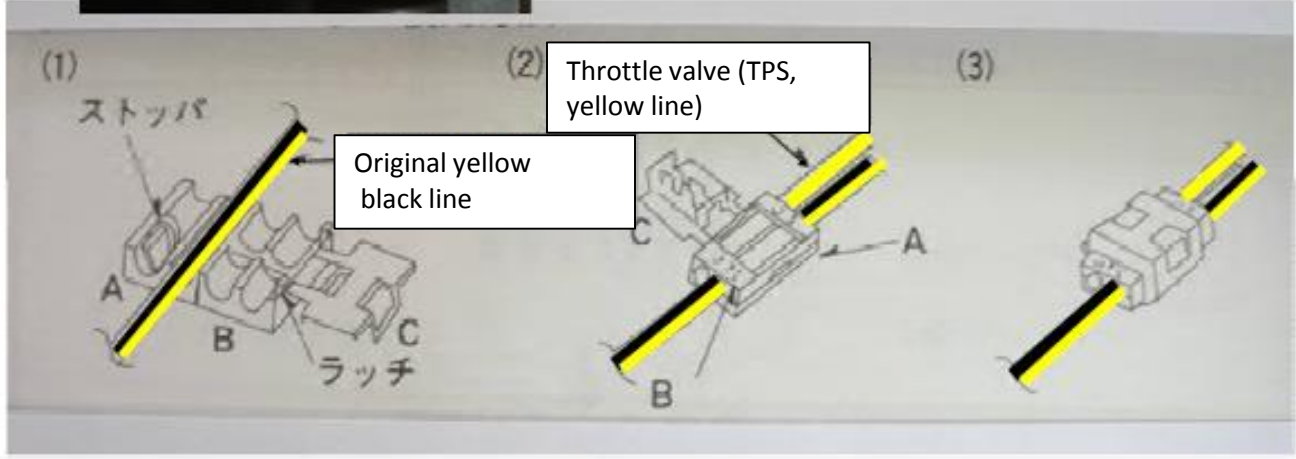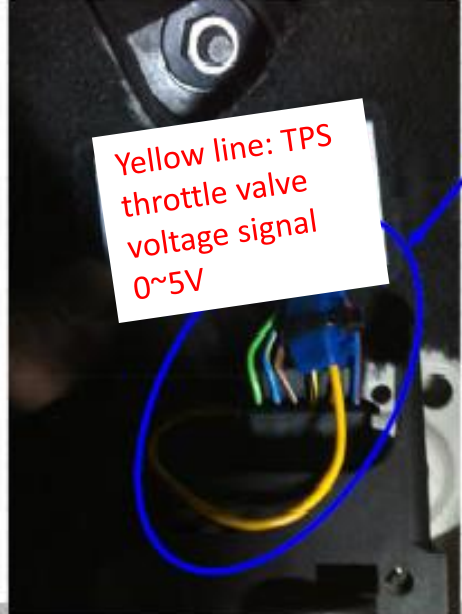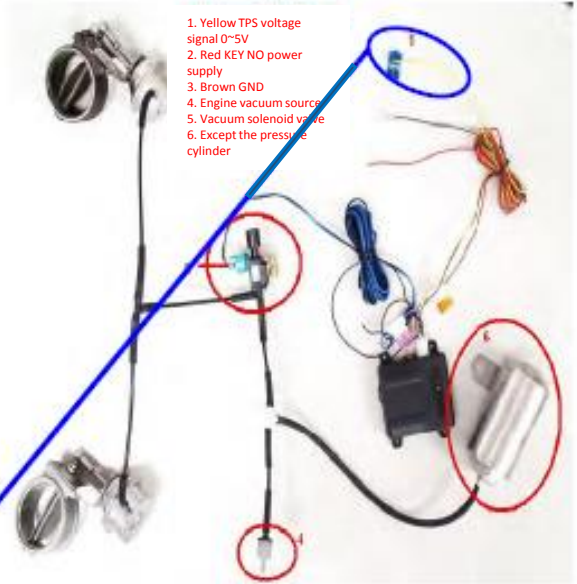



Third, connect the solenoid valve and the check valve

